 
 
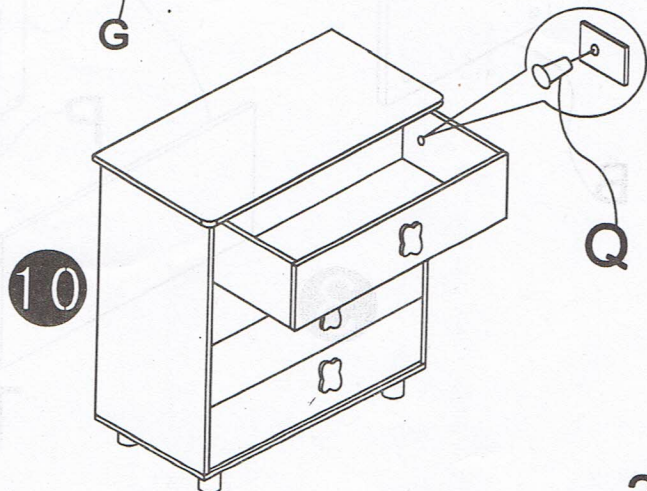 
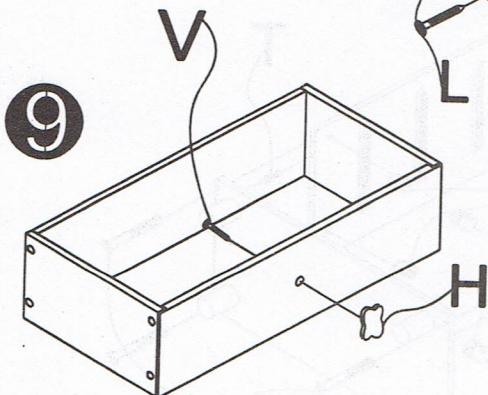 
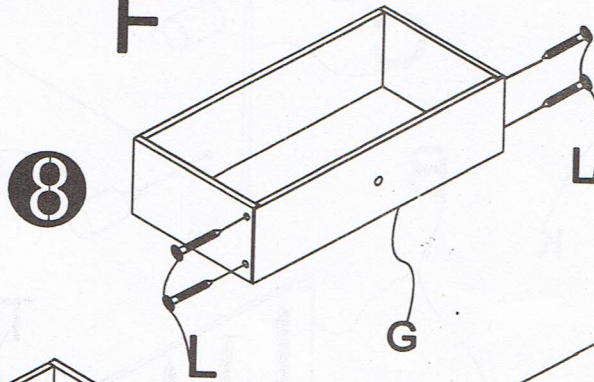 
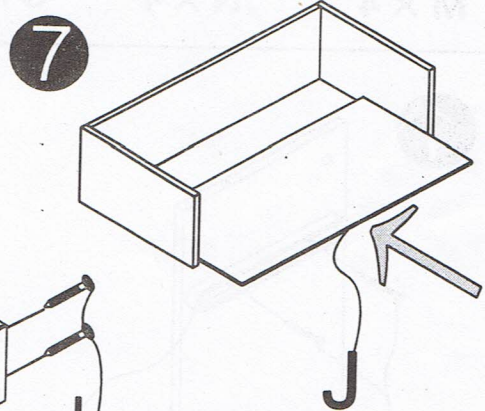 
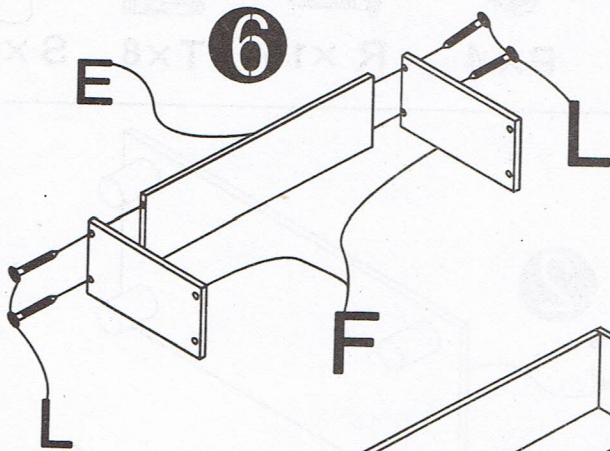 
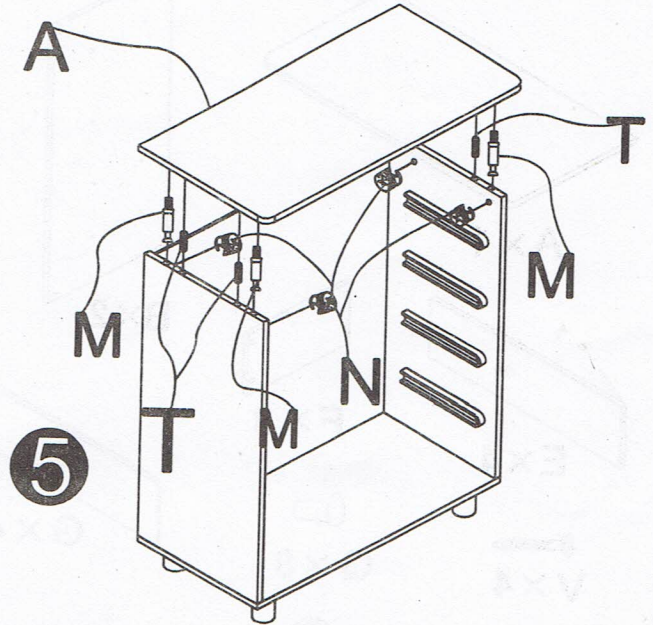 



INSTRUCTION SHEET MZ4132

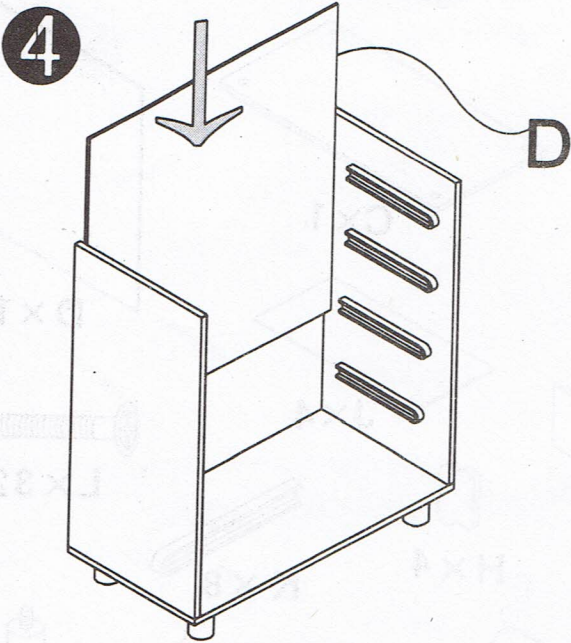


INSTRUCTION SHEET MZ4132

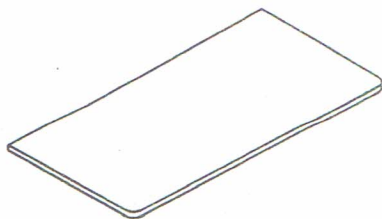

 
A x 1

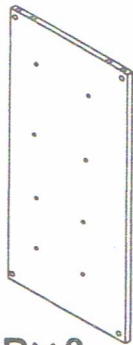


B x 2

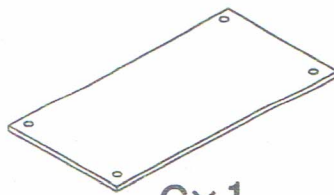 


C x 1

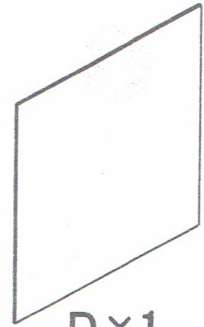 


D x 1

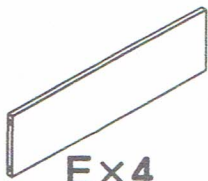 


E x 4

 

F x 8

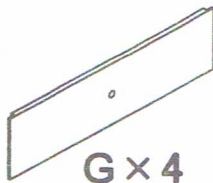 

G x 4

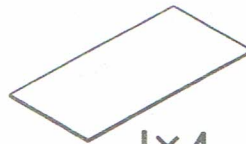 


J x 4



L x 32



 V x 4



Q x 8



H x 4



K x 8



M x 4



N x 4



O x 4



P x 4



R x 16

 


T x 8




S x 4

1

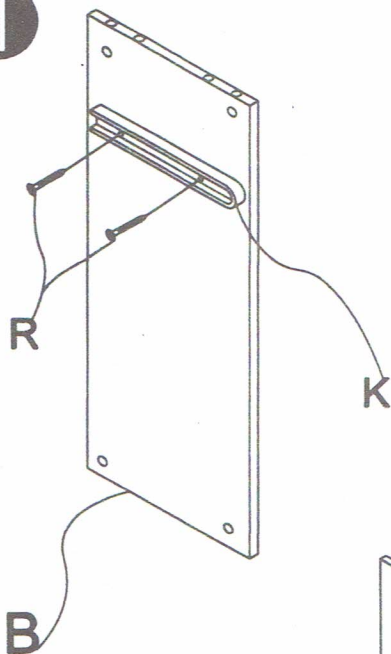

2

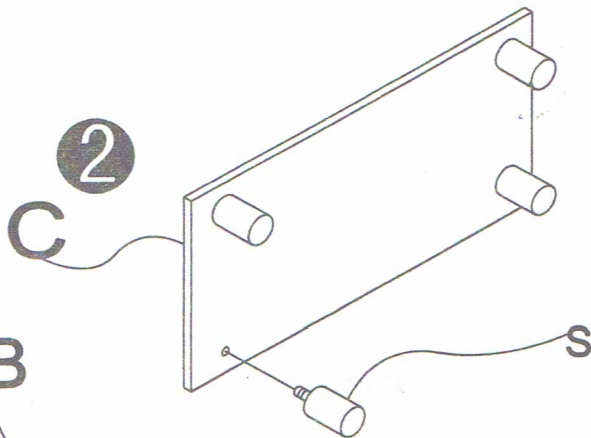 

3

