


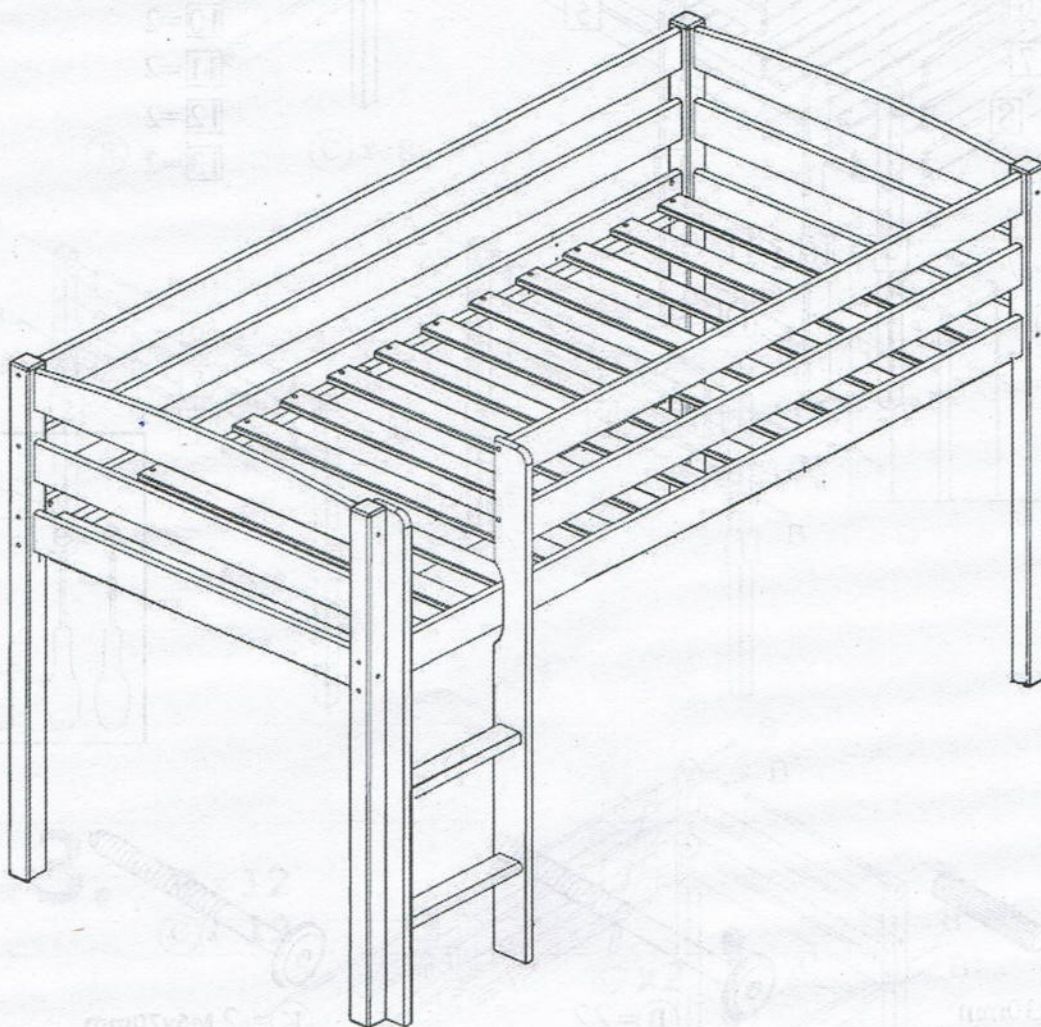
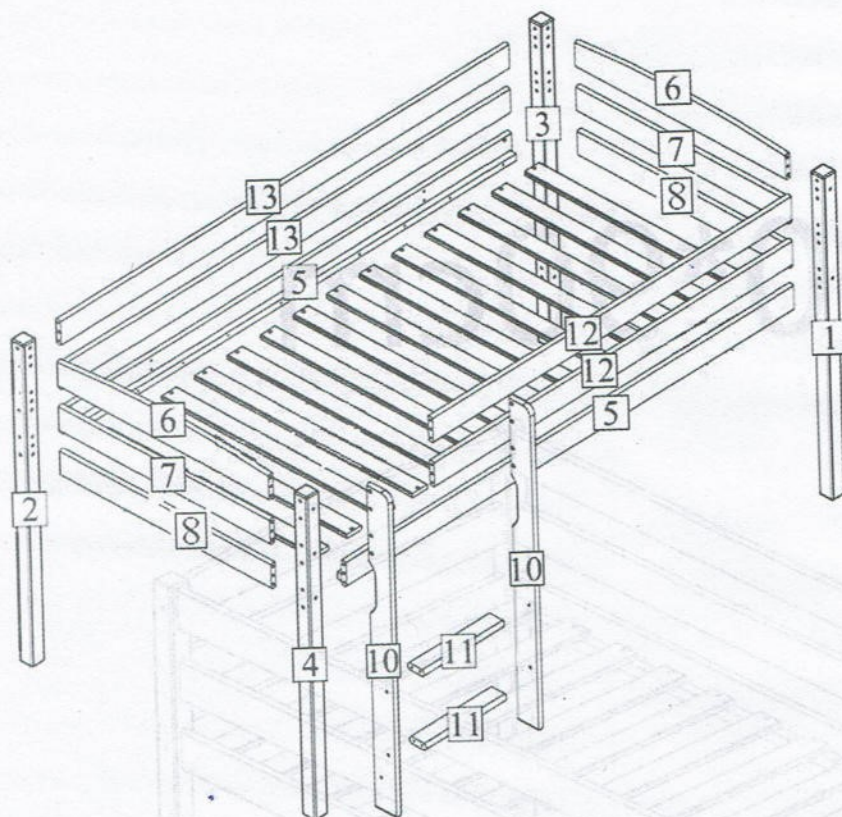



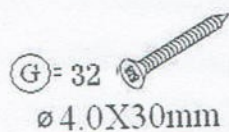
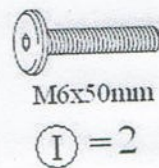
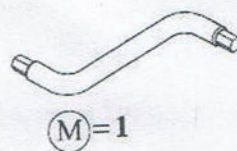

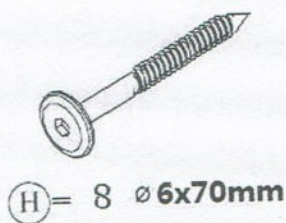
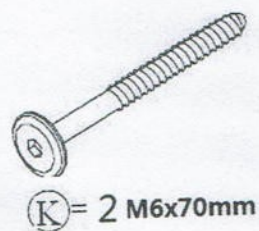


200*90cm

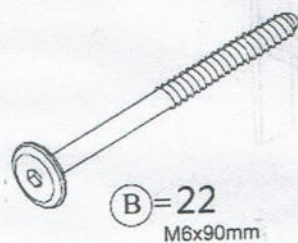


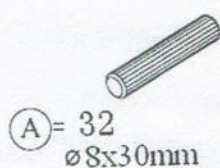

- 1=1
- 2=1
- 3=1
- 4=1
- 5=2
- 6=2
- 7=2
- 8=2
- 10=2
- 11=2
- 12=2
- 13=2

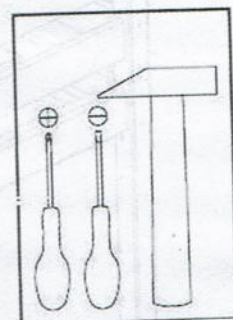


1. (A) x 32

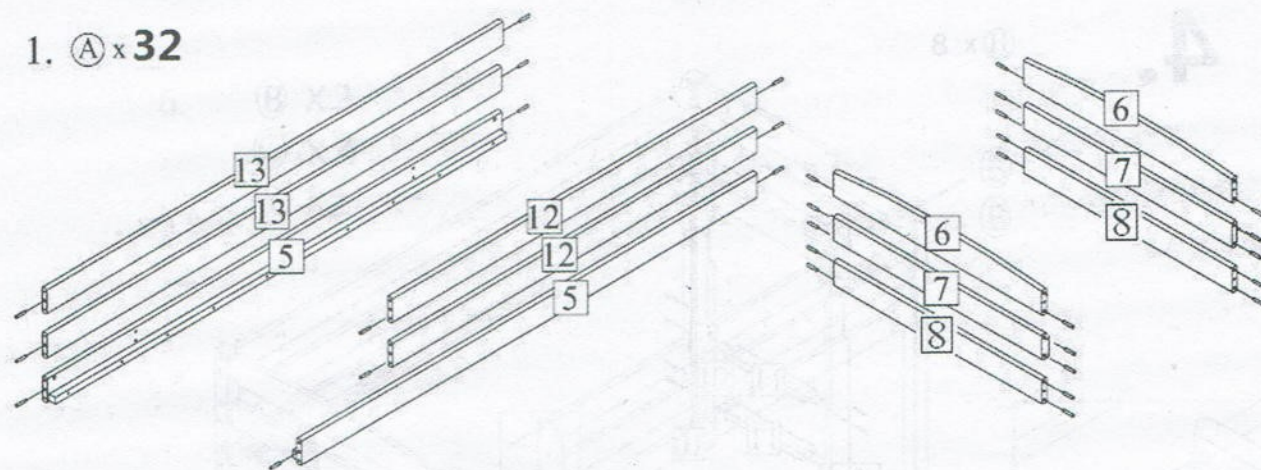

2.

(B) x 8


(C) x 8

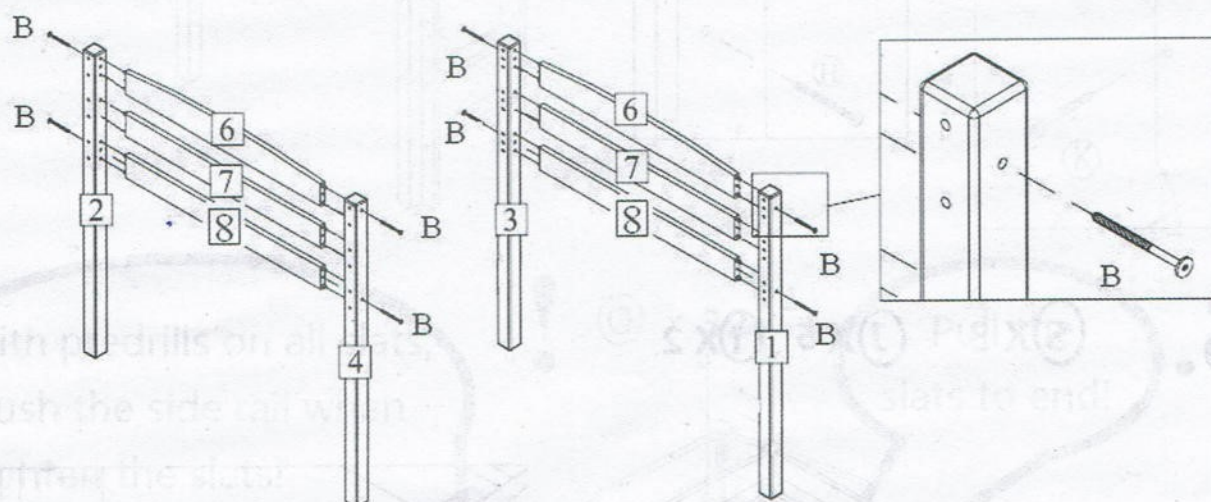

3.


(B) x 12

(C) x 12

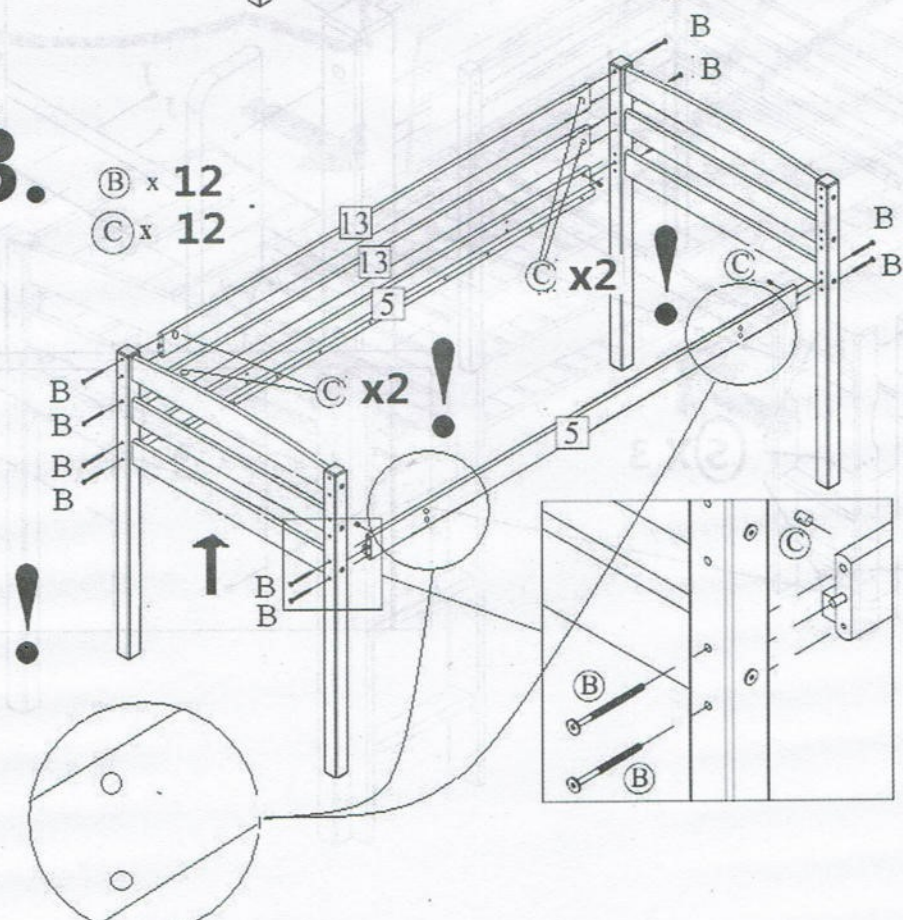

4.

Ⓜ x 8

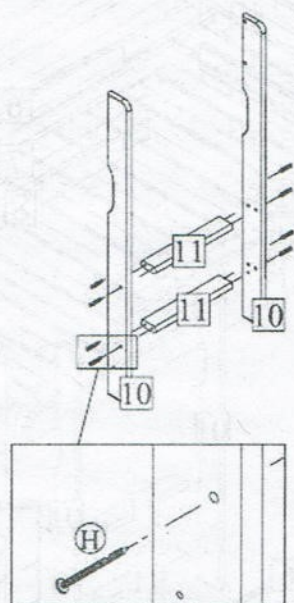


5.


Ⓢ x 3

ⓐ x 5

Ⓡ x 2

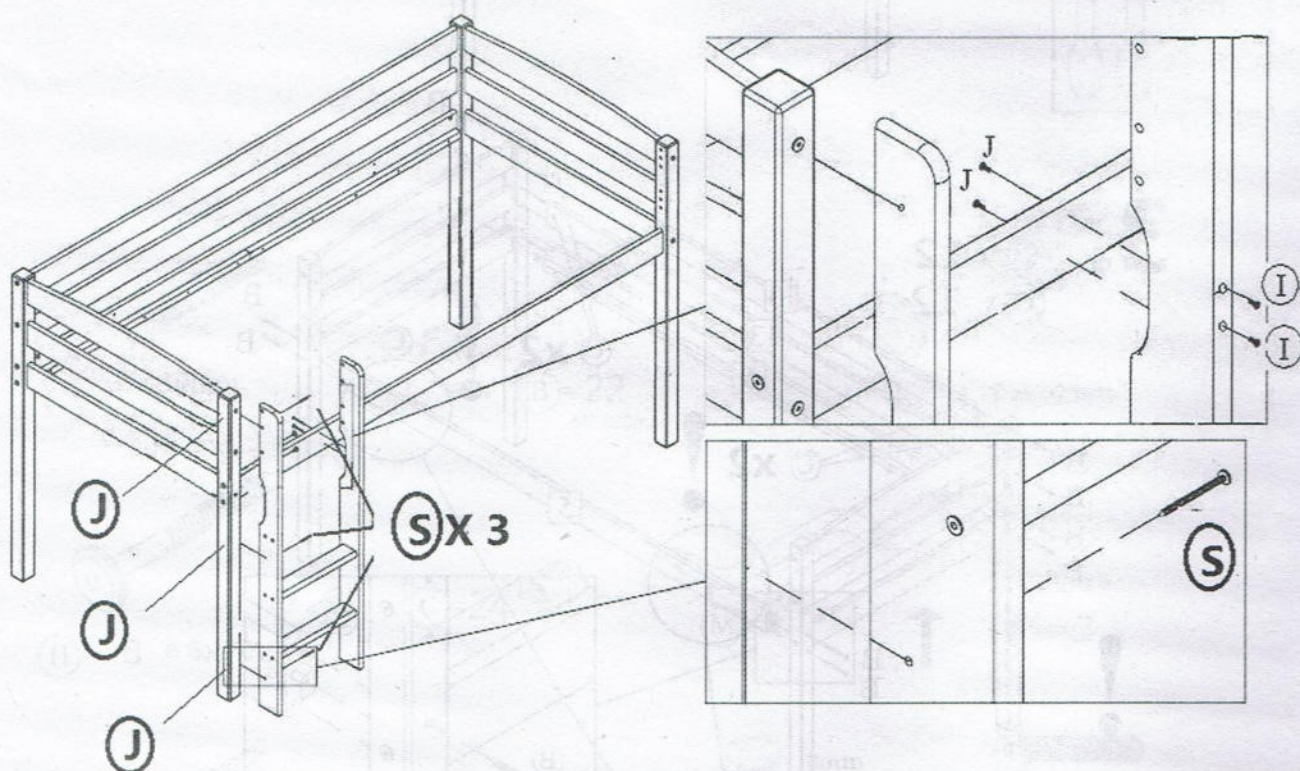

6. (B) X2
(C) X4
(K) X2

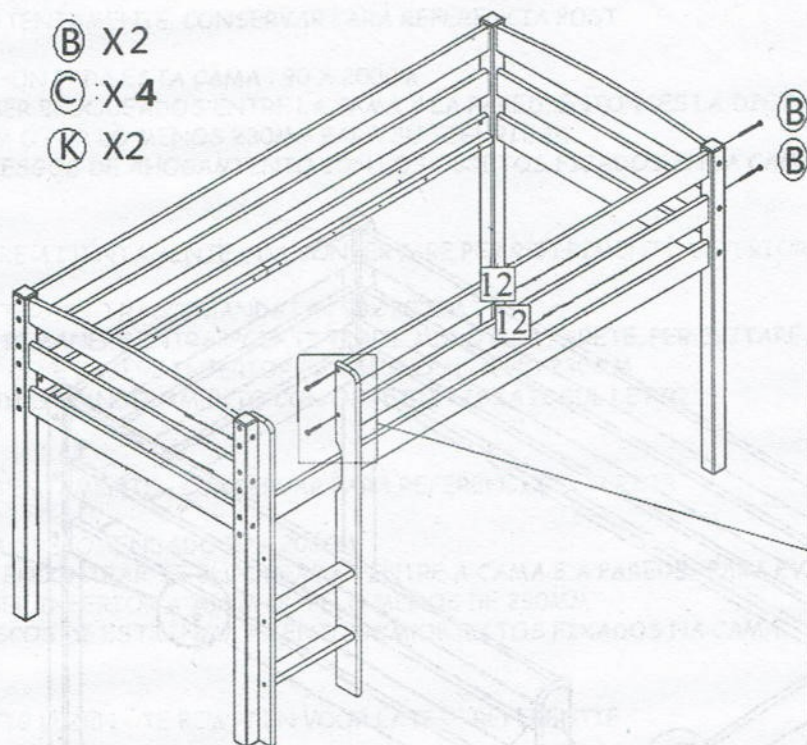


with predrills on all slats,
push the side rail when
tighten the slats!


! (G) x 32 !


Pull the
slats to end!

7.

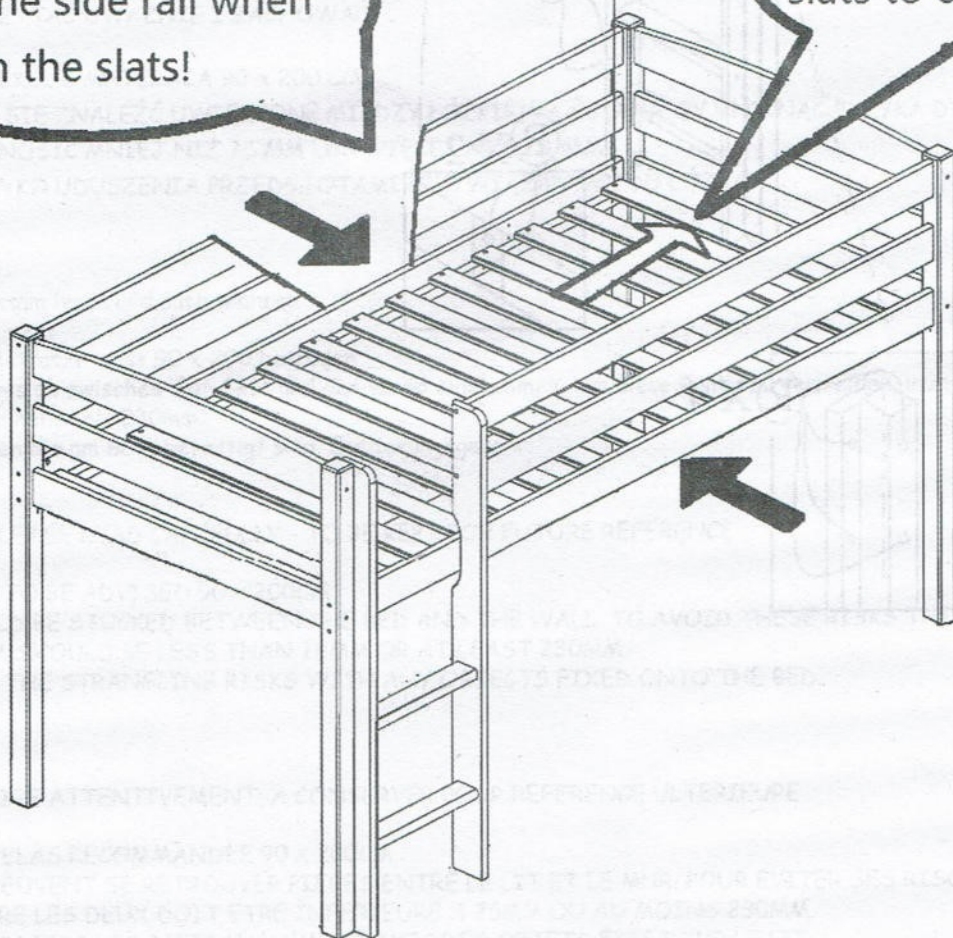




8.


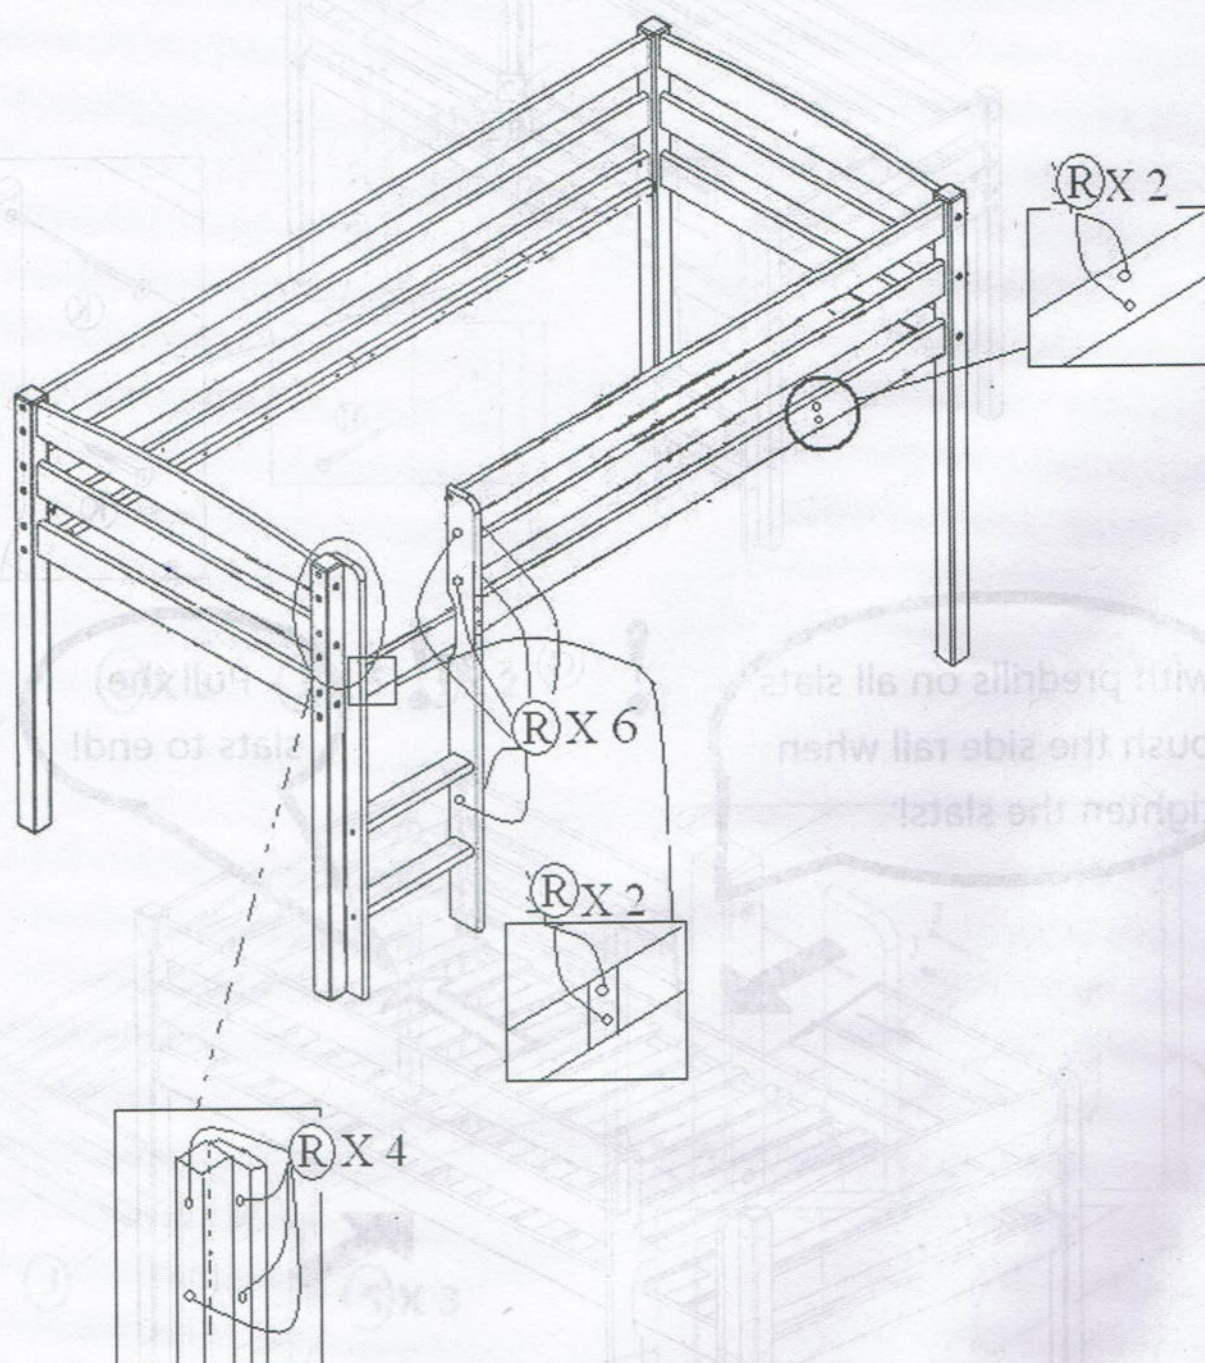



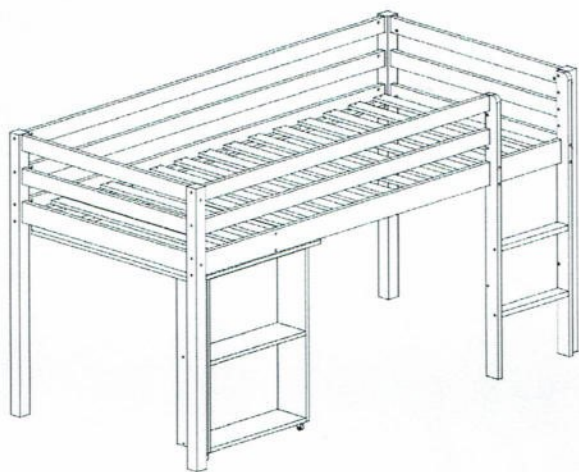



HARDWARE

H	 8mm Ø4x30mm	20
J	 30° 30° 16mm	02
K	 10mm Ø7x60mm	12
L	 10mm	02
M	 7mm Ø4x16mm	12
G	 10mm	01

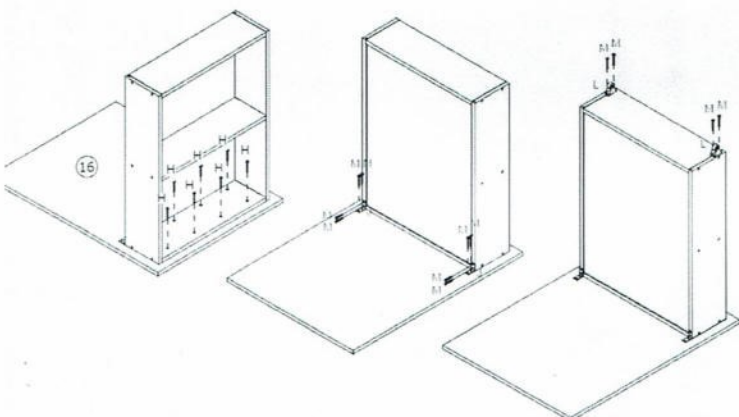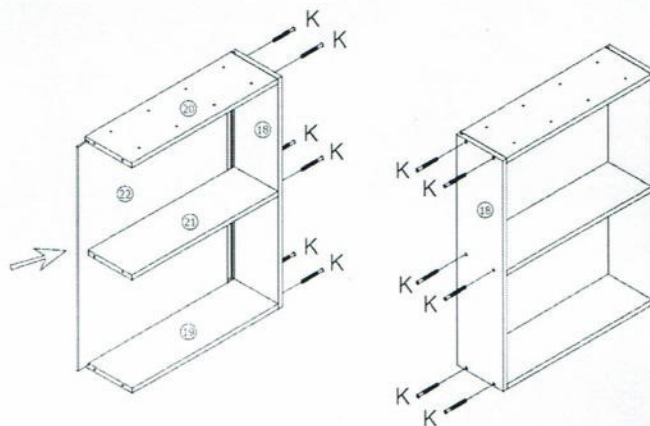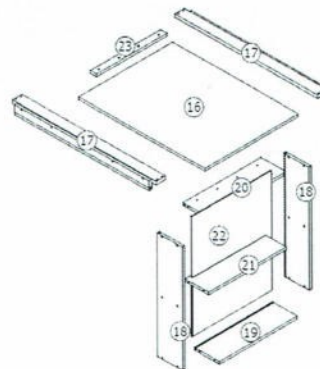



J	 30° 30° 16mm	02	M	 7mm Ø4x16mm	12
L	 10mm	02	H	 8mm Ø4x30mm	08

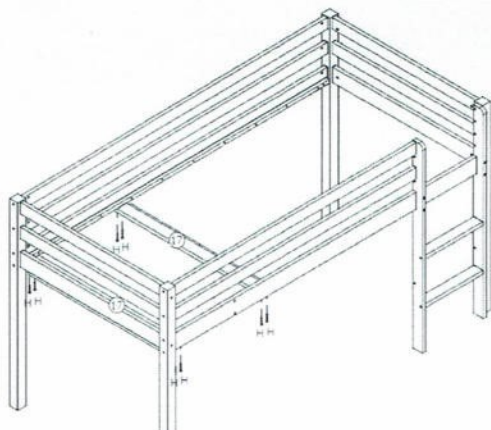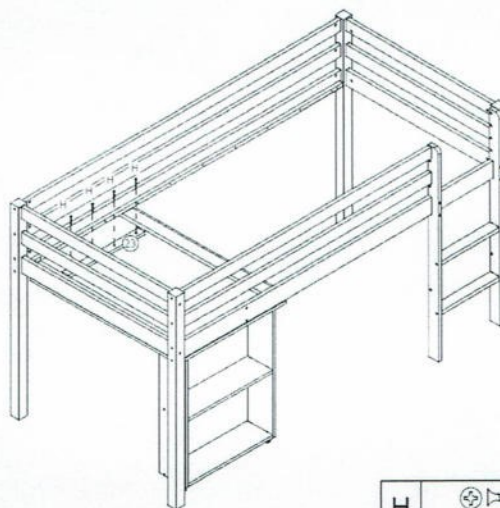

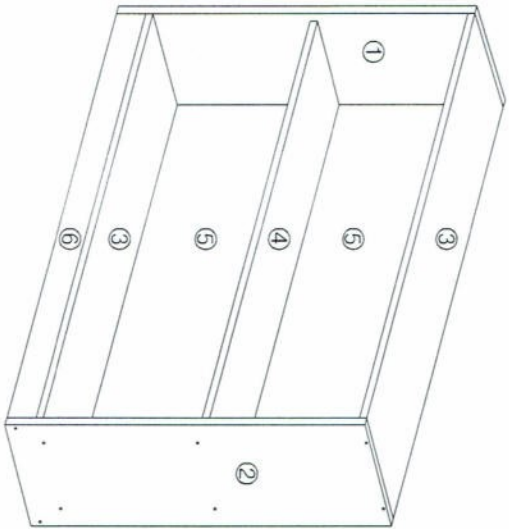

step: 2

A		$\phi 8 \times 30$	16
B		$\phi 6 \times 50$	16

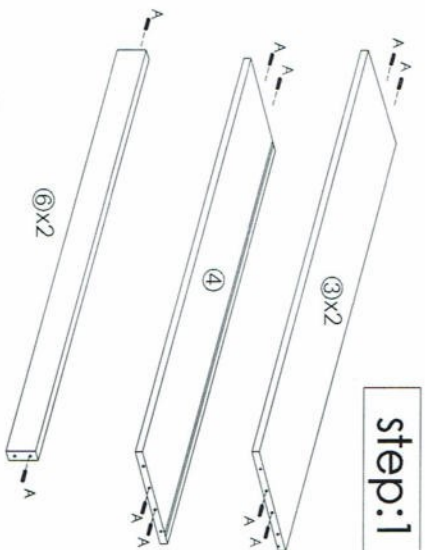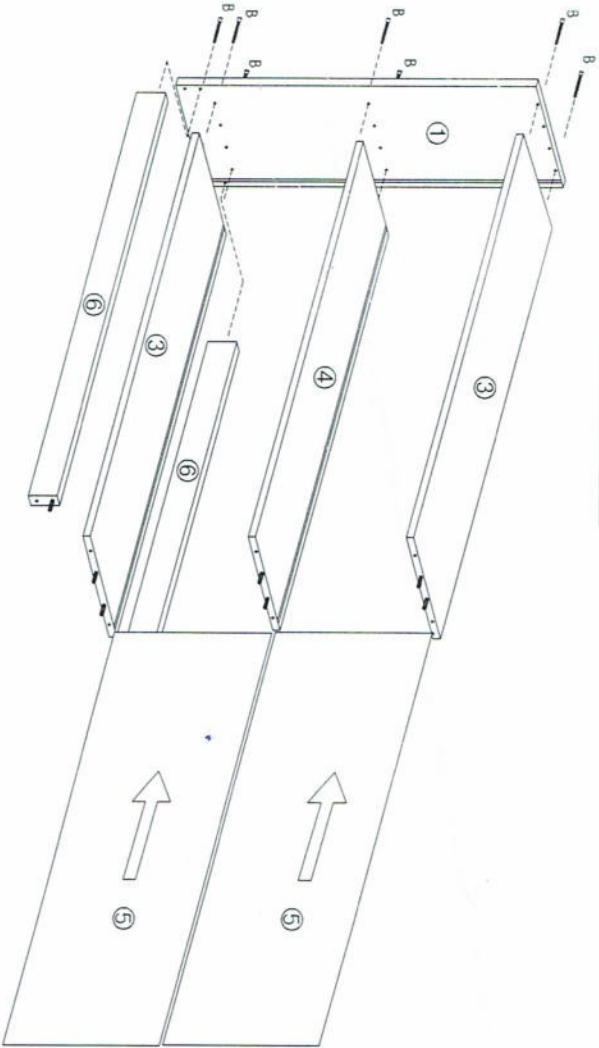

step: 1

step: 3

