



Dear Customers,

Congratulations on purchasing our pram. Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.

Note

We have used the best fabrics while designing the pram. Because there are many fabrics which are very sensitive to aggressive ultraviolet radiation from the sun, we advise you not to keep the pram in the strong sun to avoid fabric fading.


Description and Preparation to use

- This pram is intended for children up to 3 years old
- Weight allowance up to 18 kg
- Bag weight allowance up to 2 kg
- Under pram basket weight allowance up to 3 kg

Warning:
Before using the pram, make sure that the folding mechanism has been locked.


Unfolding the chassis

Pull the handle up so that the folding locks click.

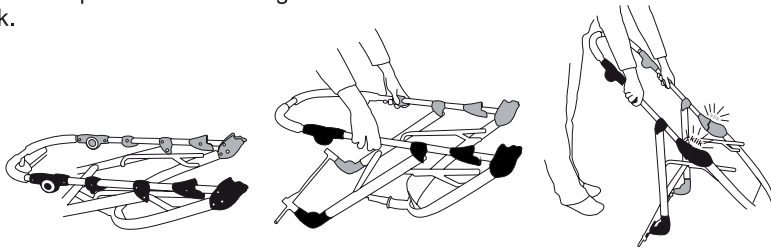


Folding the chassis

Pull the two locks placed on each handle towards you.

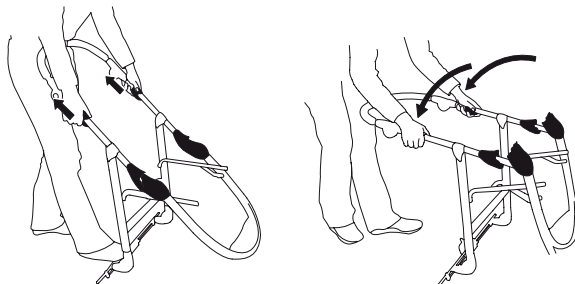


Assembling the back wheels

- Press the metal button on the wheel and insert the wheel on the axis.
- Pull the wheel slightly to check if it has set properly

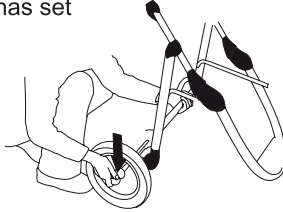

Assembling the front wheels:

- Insert the front mechanism of the vehicle into the part that turns **so that it locks**
- Undoing the front mechanism, press the spring, which is located at the bottom of the vehicle. Pull out the whole mechanism.

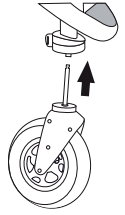

Warning:

Before using the pram, check the correct assemblage of gondola or seat to the vehicle.

Warning:


Every additional load to the handle of the vehicle affects its stability.

Warning:

The seat is not appropriate for children under 6 months


Operating the height adjustable handles:

Press the button on the side, and raise or lower to the desired position.

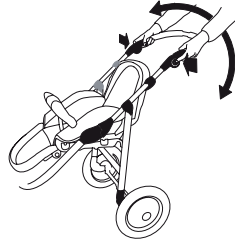

Operating your leg support:

Press the buttons simultaneously underneath both sides of the leg support, and raise or lower to the desired position.

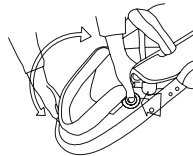

Using the brake


To engage the brake, press down on either pedal. A 'click' will be heard. To disengage the brake, simply push the brake pedal upwards.

Note about the pumped tires:

The tire has a bicycle valve. The correct air pressure should not be higher than 0.2 atm. The air pressure should be appropriate to the child's weight. The lighter the child, the less air pressure required (to aid comfort).

Operating the swivel wheels

By pressing the locking catch down, the wheels will lock in the fixed position. By lifting this up the wheels will freely swivel for easier steering.

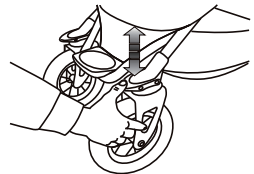

This pram is not suitable for rocking your baby from side to side as it might cause damage to the frame or whole structure.

